
## **DynaClean External Drive**

## **Replacement Parts**

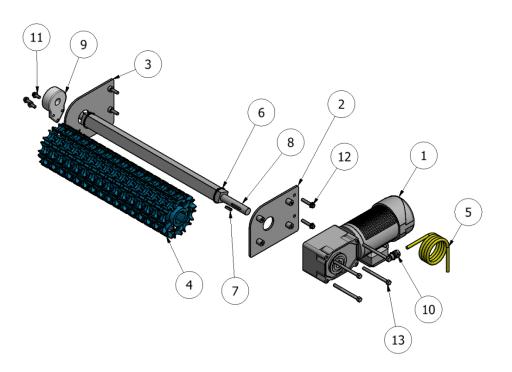

- 1 Drive Motor
- 2 Drive Plate
- 3 Bearing Plate
- 4 Drive Sprocket
- 5 Motor Power Cord
- 6 Bearing Plate
- 7 Retaining Ring
- 8 Drive Shaft
- 9 Flange Bearing
- 10 Strain Relief
- 11 Bolt for Bearing
- 12 Bolt for Plates
- 13 Bolt for Motor